



GOVERNOR

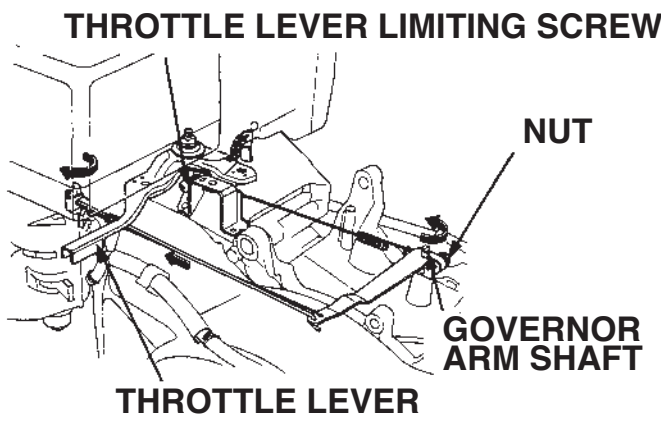

Rotate the governor arm shaft as far as it will go in the same direction the governor arm moved to open the throttle.
Tighten the nut on the governor arm.



Maximum speed	3.850±150min ⁻¹ (rpm)
---------------	----------------------------------

VALVE CLEARANCE

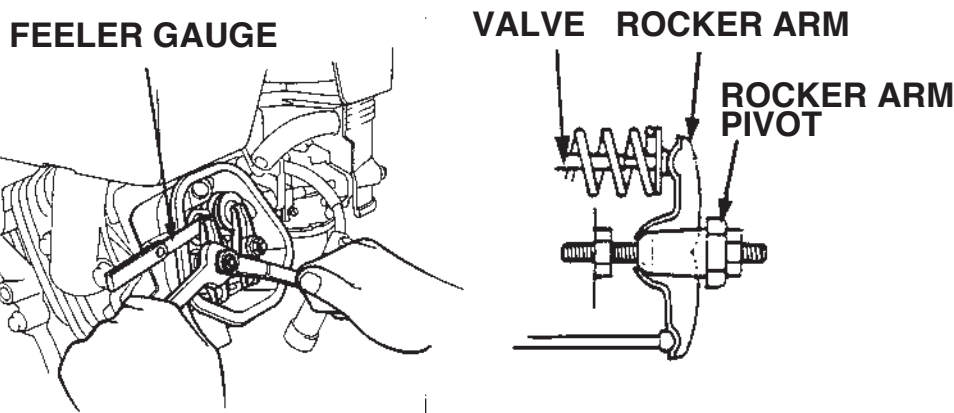


Standard valve clearance	IN	0.15±0.02mm (0.006±0.001 in)
	EX	0.20±0.02mm (0.008±0.001 in)

IGNITION COIL AIR GAP

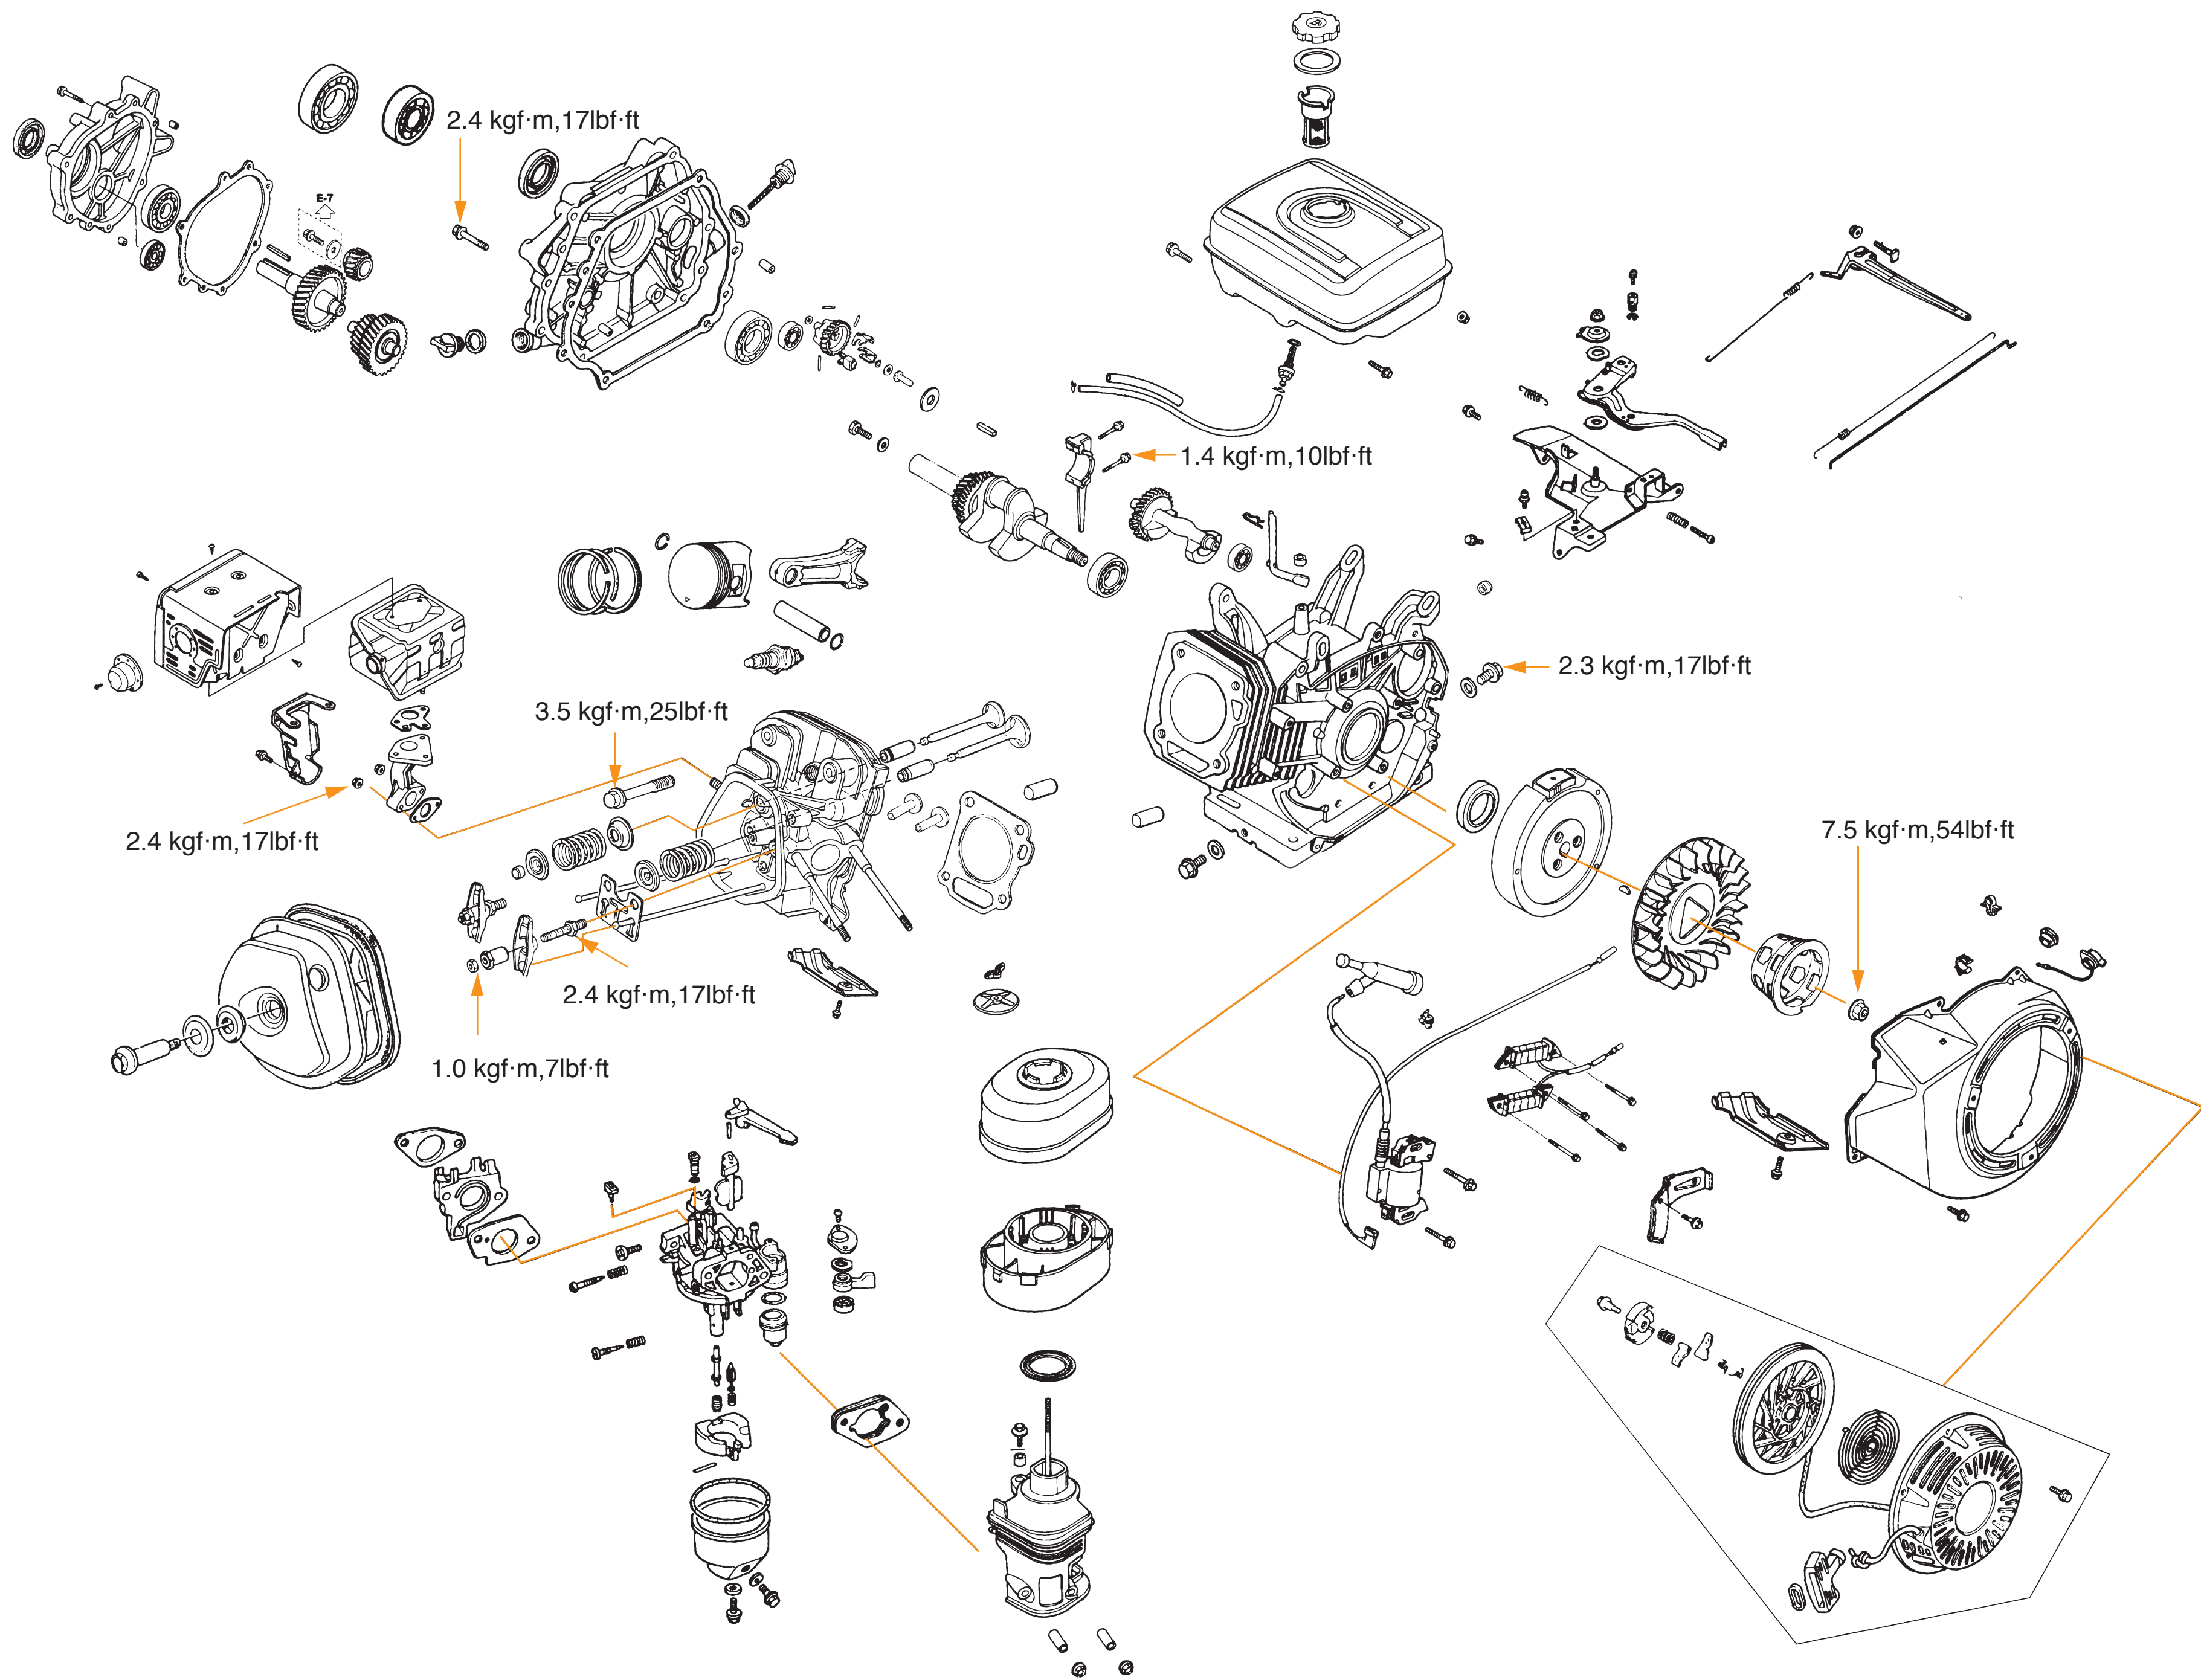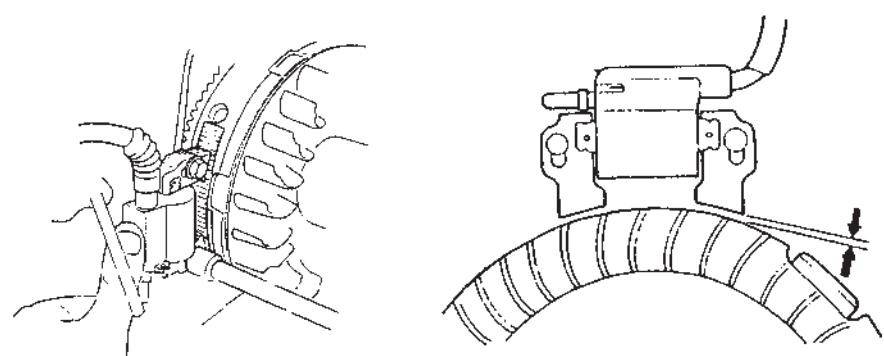


© Honda Motor Co., Ltd. Power Product Service Division.


ENGINE OIL

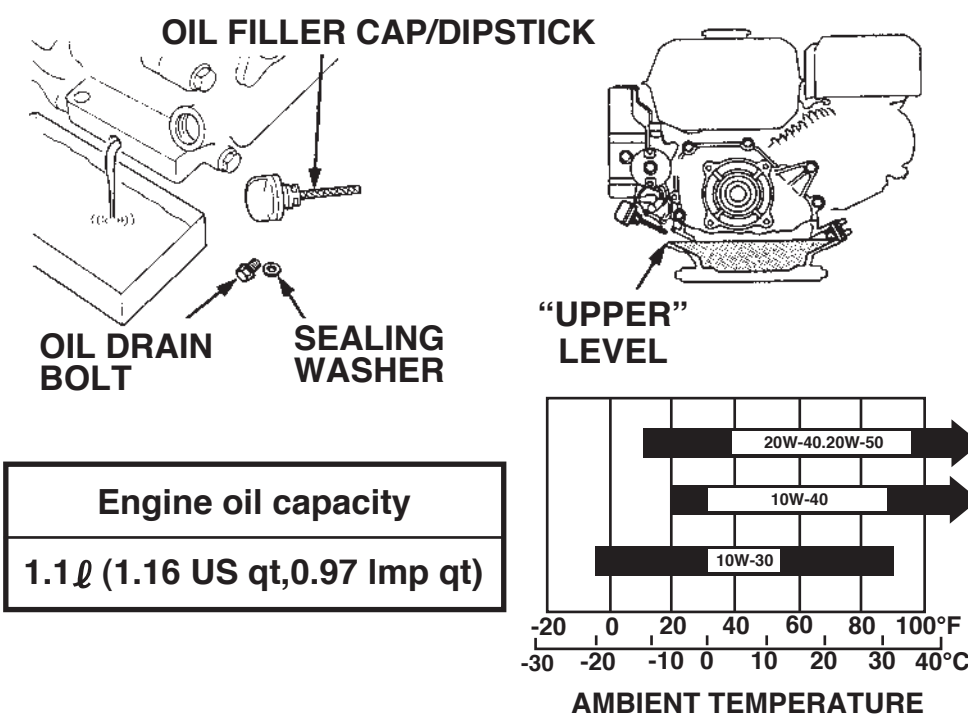


AIR CLEANER

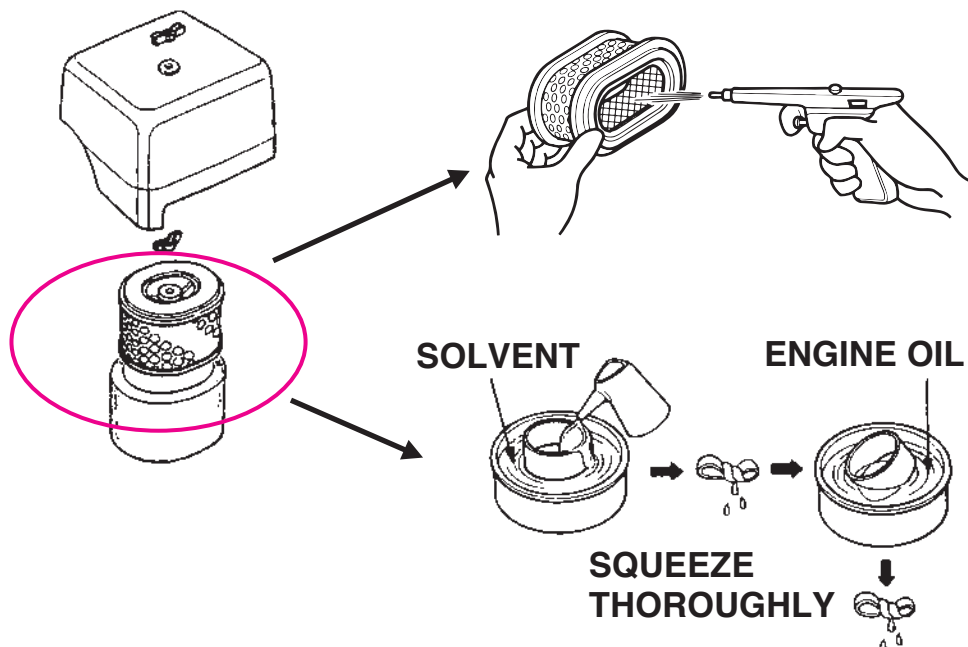


SPARK PLUG

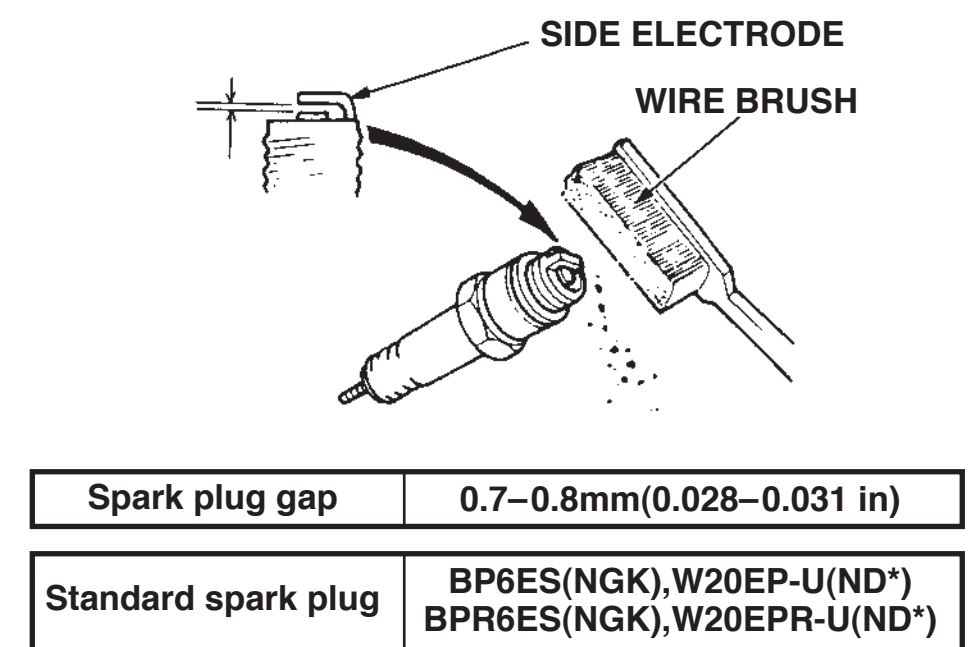


PISTON DISASSEMBLY/REASSEMBLY

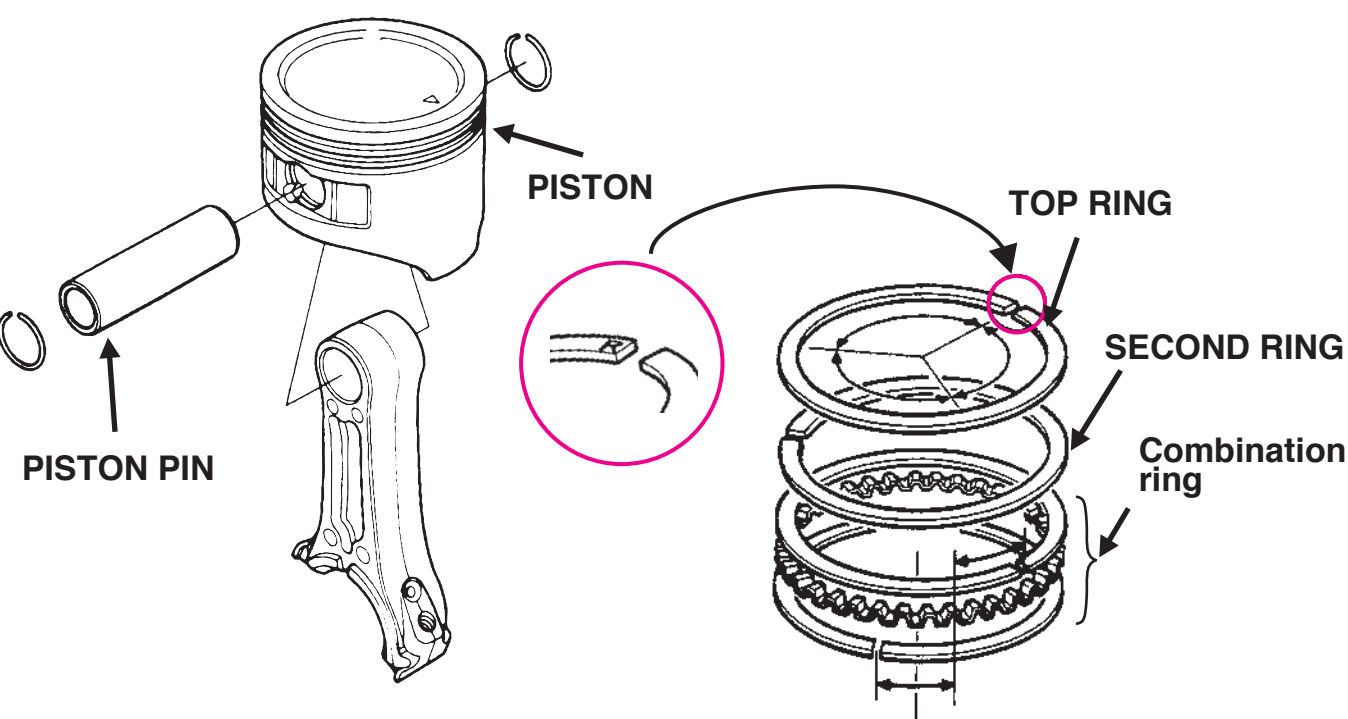

CAMSHAFT

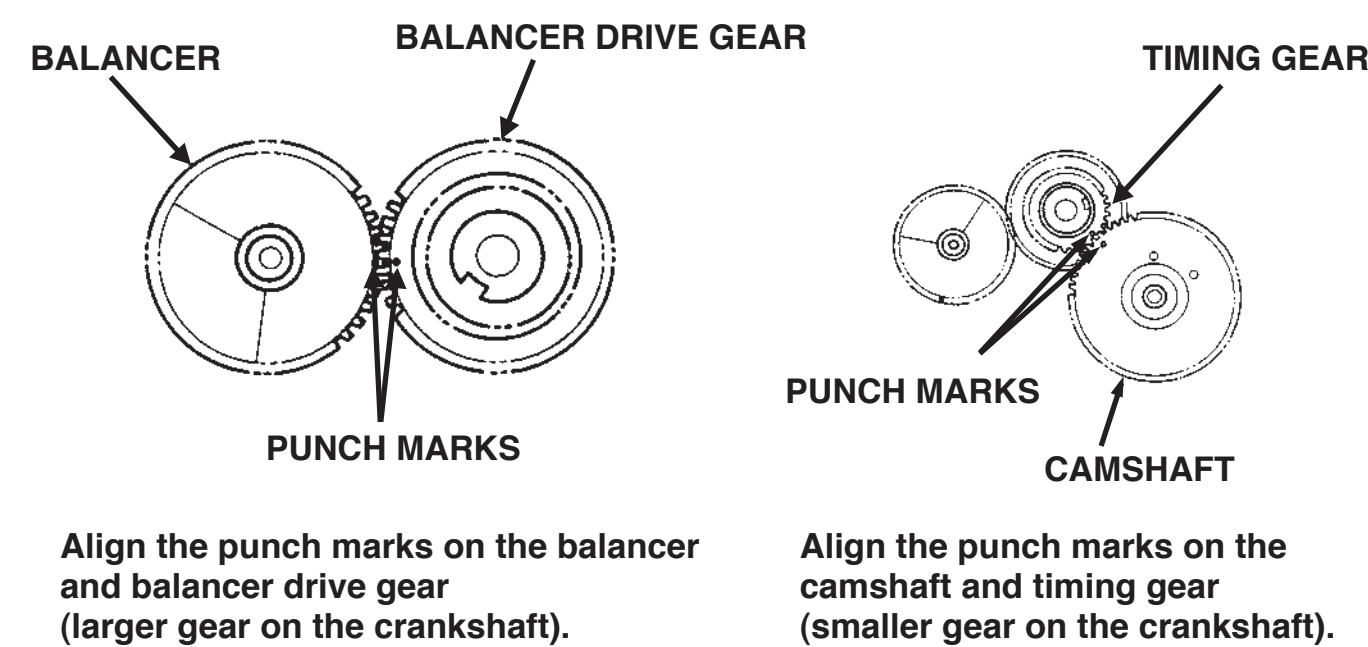

CARBURETOR DISASSEMBLY/REASSEMBLY

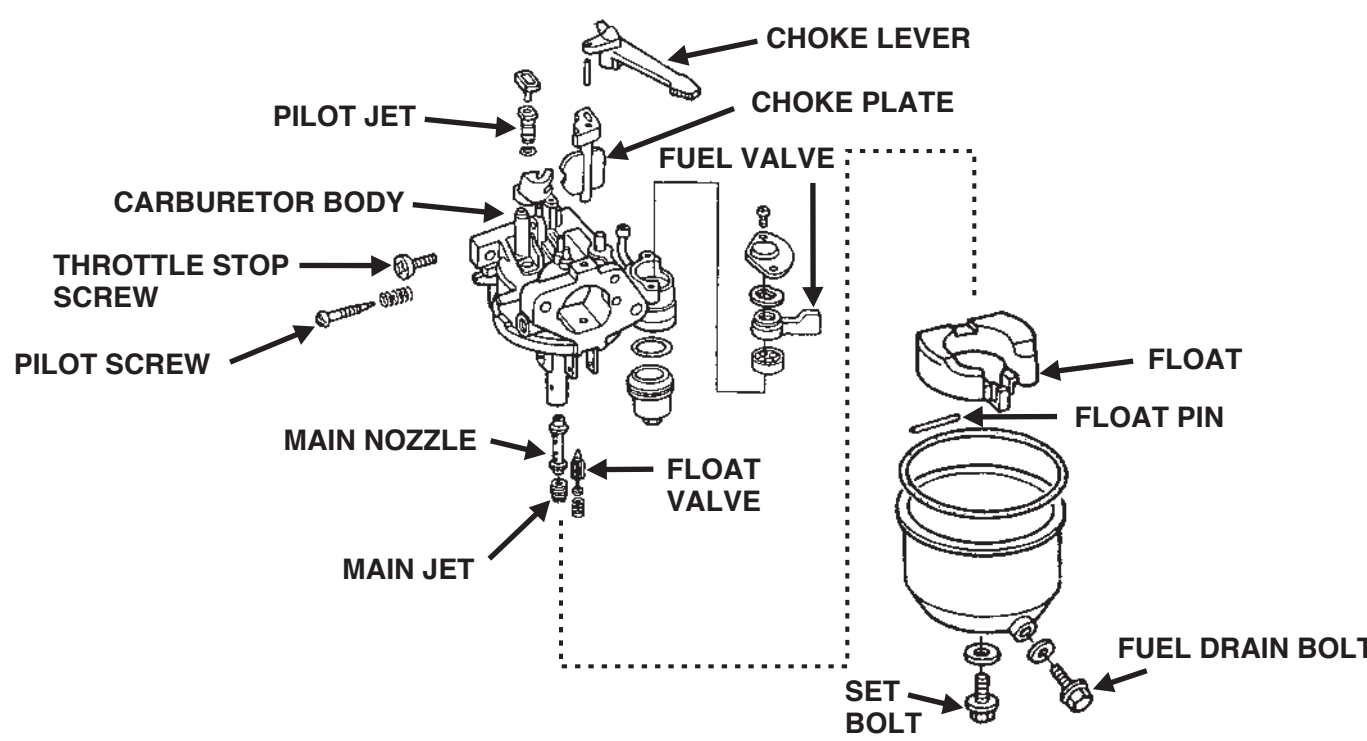

CARBURETOR REMOVAL/INSTALLATION

