


Check the fuel and engine oil level before starting the engine.

1



Turn the fuel valve lever to the ON position.

4

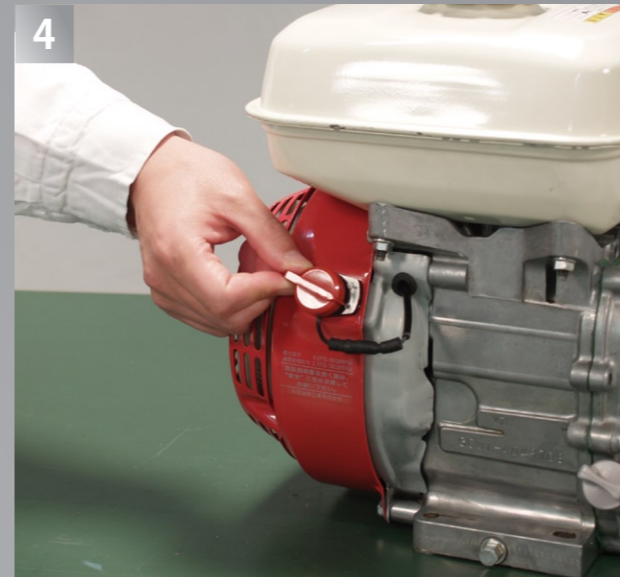

Turn the engine switch to the ON position.

2



Move the choke lever to the CLOSED position.

5




Pull the starter grip lightly until you feel resistance, and then pull briskly.

3



Move the throttle control lever slightly to the left.

6

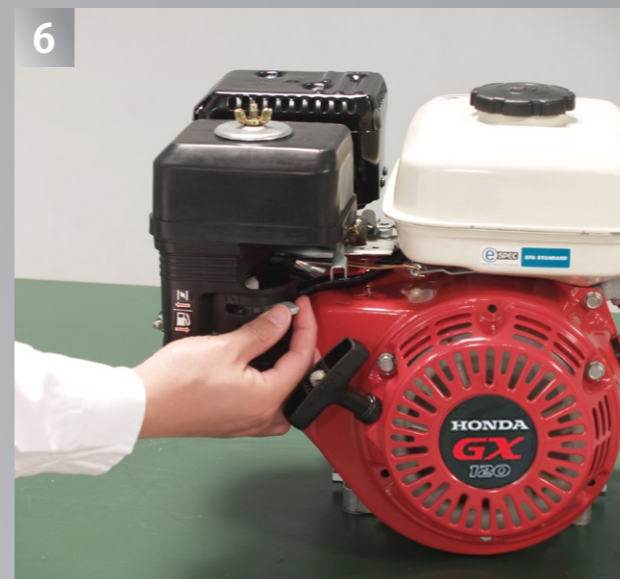

Gradually move the choke lever to the OPEN position as the Engine warms up.